






INSTRUKTIONER

KNAPPER

- ①  – Tryk og hold i tre sekunder for at tænde/slukke.
Tryk for at skifte imellem afspilningstilstande, trådløst/MP3 (Micro SD/TF kort (medfølger ikke)).
- ②  – Ved opkald i trådløs tilstand. Tryk for at modtage opkaldet. Tryk og hold for at annullere opkald. Tryk to gange for at genkalde.
Ved afspilning, tryk for pause/afspilning.
- ③  – Ved afspilning, tryk for næste sang, tryk og hold for at skrue op for volumen.
- ④  – Ved afspilning, tryk for forrige sang, tryk og hold for at skrue ned for volumen.

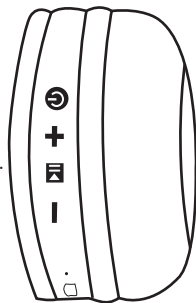

LED-INDIKATOR

I trådløs tilstand: Blåt lys blinker hurtigt, når enheden er tilgængelig. Det blå lys blinker langsomt, når der er skabt forbindelse.

I MP3 tilstand: Blåt lys blinker langsomt under afspilning.

Ved opladning: Rødt lys ved opladning. Det røde lys slukker, når enheden er fuldt opladet.

TRÅDLØS AFSPILNING

Tænd enheden.

Naviger til de trådløse indstillinger på den smartphone eller anden enhed med trådløs tilslutning. Find enheden (Nohro LED HP) på listen over tilgængelige enheder og tilslut.

FORBINDELSE MED LEDNING

Isæt det medfølgende audiokabel. Enheden skifter selv til afspilning gennem audiokabel.

Virker til smartphones/MP3 afspillere/computere.

FM-TILSTAND

Tryk på ① til du tilgår FM-tilstand

Tryk på ② for automatisk søgning efter FM-stationer. Alle tilgængelige stationer bliver automatisk gemt.

Tryk på ③/④ for at skifte imellem de gemte FM-stationer.

MP3-TILSTAND

Indsæt et Micro SD/TF kort i enheden (Max 32 gb Micro SD HC (medfølger ikke))
Enheden skifter automatisk til MP3 tilstand.

Tryk på ② for at pause/afspille musikken.

OPLADNING

Isæt det medfølgende ladekabel i enhedens Micro USB indgang og den anden ende i en vægoplader (medfølger ikke) eller en computer for at oplade.

Fuldendt opladning indikeres med LED lyset.

Specifikationer:

Bluetooth Version: Bluetooth v. 5.0
Batterikapacitet: 150 mAh
Sensitivitet: 85 dB (± 3 dB)
Frekvens: 20 Hz-20 kHz
Standard ladetid: Op til 2 timer
Spilletid: Op til 6 timer
Standbytid: Op til 18 timer

Funktioner:

Håndfri tale
Trådløs afspilning
FM Radio
Afspilning fra micro SD/TF kort (ikke inkluderet)
Kabeltilslutning (til ikke-trådløse enheder med 3,5 mm jack-stik eller hvis høretelefonerne løber tør for strøm).
LED lys som blinker og skifter i takt til musikken.



Tilbehør:



USB kabel til opladning (20 cm)
Audio kabel (3,5 mm jack, 100 cm).


I tilfælde af problemer eller spørgsmål til produktet, kontakt da venligst importøren på: info@nohro.dk eller +45 6913 2121.

INSTRUCTIONS

BUTTONS

-  – Press and hold for three seconds to turn on/off.
Press to switch between modes, wireless/MP3 (Micro SD / TF card (not included)).
-  – Receiving calls in wireless mode. Press to receive the call. Press and hold to cancel call. Press twice to recall.

When playing, press for play/pause.
-  – When playing, press for the next song, press and hold to increase volume.
-  – When playing, press for the previous song, press and hold to decrease the volume.

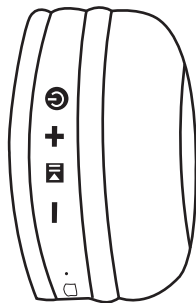

LED INDICATOR

In wireless mode: blue light flashes quickly when the device is available.

The blue light flashes slowly when a connection is established.

In MP3 mode: Blue light flashes slowly during playback.

When charging: Red light when charging. The red light turns off when the unit is fully charged.

WIRELESS PLAYBACK

Turn on the unit.

Navigate to the wireless settings on the smartphone or other device with wireless connection. Locate the device (Nohro LED HP) in the list of available devices and connect.

CONNECTION WITH CORD

Insert the supplied audio cable. The unit automatically switches to playback through audio cable.

Works with smartphones/MP3 players/computers.

FM-MODE

Press ① until you enter FM mode

Press ② to automatically search for FM stations. All available stations are automatically saved.

Press ③ / ④ to switch between the saved FM stations.

MP3-MODE

Insert a Micro SD/TF card into the device (Max 32 gb Micro SD HC (not included))

The unit automatically switches to MP3 mode.

Press ② to pause/play the music.

CHARGING

Insert the supplied charging cable into the device's Micro USB port and the other end into a wall charger (not included) or a computer to charge.

Fully charged is indicated by the LED light.

Specifications

Bluetooth Version: Bluetooth v. 5.0

Batteri capacity: 150 mAh

Sensitivity: 85 dB (± 3 dB)

Frequency: 20 Hz-20 kHz

Standard charging time: Up to 2 hours

Play time: Up to 6 hours

Standby time: Up to 18 hours

Functions:

Hands-free

Wireless sound

FM Radio

Play music from micro SD/TF card (not included)

Cable connection (for non-wireless devices with 3.5 mm jack or headset runs out of power).

LED lights that flashes and changes to the beat of the music.

Accessories:

USB cable for charging (20 cm)

Audio cable (3.5 mm jack, 100 cm).

nohro

In case of problems or questions about the product, please contact the importer at: info@nohro.dk or +45 6913 2121.

Nohro ApS
info@nohro.dk