


Design Speaker - Bluetooth
Brugervejledning (Læs før brug)

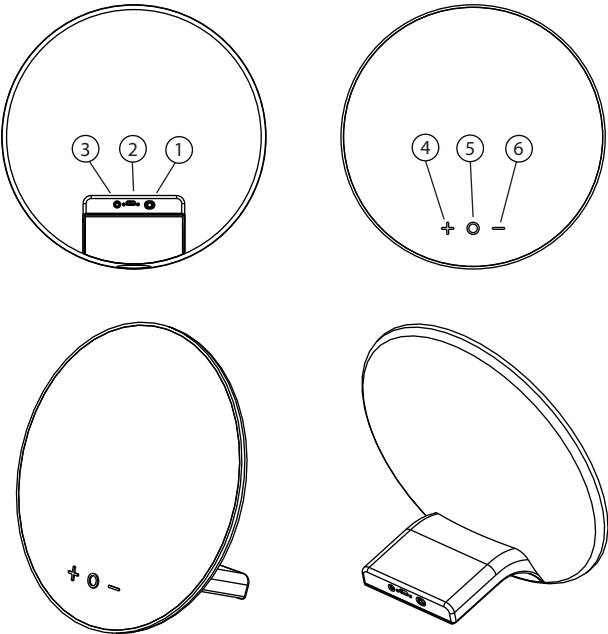

1. Tænd/sluk
2. Opladning
3. AUX-indgang
4. Næste / lydstyrke op
5. Afspil / pause
6. Forrige / lydstyrke ned

Strøm:
Oplad højttaleren helt før brug.

For at oplade højttaleren skal du bruge mikro-USB-kablet (inkluderet): Indsæt stikket i ②, der er placeret på bagsiden af enheden, og sæt derefter USB-stikket på opladningskablet, i USB-porten på en computer eller en vægoplader (medfølger ikke).

Et rødt lys indikerer opladning. Når batteriet er fuldt opladet, slukkes det røde lys automatisk.

Afspilning af musik via Bluetooth
Tænd højttaleren ved at skubbe ① på bagsiden af højttaleren til 'ON'-position.

Den blå indikatorlampe blinker hurtigt. Dette indikerer, at højttaleren er i parringstilstand og søger efter din Bluetooth-enhed.

Tænd for Bluetooth-funktionen på din enhed, søg på listen over tilgængelige enheder efter "**Design Speaker**". (Indtast evt. adgangskoden "0000" for at afslutte parringen).

Det blå lys begynder at blinke langsomt, når parringen er afsluttet. Begynd at afspille musik på din enhed. Højttaleren har en rækkevidde på op til 10 m.

Justér lydstyrken på din enhed til et behageligt niveau. Sluk for højttaleren, når den ikke er i brug.

Afspilning gennem AUX
Brug det inkluderet AUX-kabel for at afspille musik til andre enheder uden Bluetooth.
Tilslut det medfølgende AUX-kabel til ③ på bagsiden på højttaleren, og sæt den anden ende i din enheds 3,5 mm jack indgang.
Højttaleren skifter automatisk til AUX-afspilningsfunktion.
Alle funktioner betjenes via din enhed.

Knapkontrol: (når højttaleren er trådløst tilsluttet til en enhed)
+: Tryk for næste nummer. Tryk og hold nede for at øge lydstyrken.
-: Tryk for forrige nummer. Tryk og hold nede for at reducere lydstyrken.
o: Tryk én gang for at afspille / sætte din musikafspilning på pause.

Advarsel:
Hold højttaleren væk fra vand og varme.
Lavt strømniveau kan forårsage dårlig forbindelse.
Batteripakken må ikke udsættes for overdreven varme, såsom solskin, ild eller lignende.


Boksen indeholder:
1 x Højttaler
1 x 50 cm opladerkabel
1 x 30 cm AUX-kabel

Bluetooth Version	V 5.0
Opladningsspændning	5 V
Opladningsstrøm	500 mA
Batteriets arbejdsspænding	3,7 V
Opladningstid	Op til 3 timer
Opladningstype	Mikro USB-port
Afspilningstid	Op til 4 timer
Batterikapacitet	1200 mAh
Watt pr. kanal	2 x 5 W
Frekvensrespons	120 Hz - 18 kHz
Produktstørrelse (LxBxH mm)	260x260x120 mm
Vægt på højttaler	890 g

I tilfælde af problemer eller spørgsmål om produktet, Kontakt importøren på: info@nohro.dk eller +45 6913 2121.

** Alle registrerede varemærker tilhører deres respektfulde ejere og har intet at gøre med dette produkt.*

Design Speaker - *Bluetooth*
Instruction Manual (Read before first use)

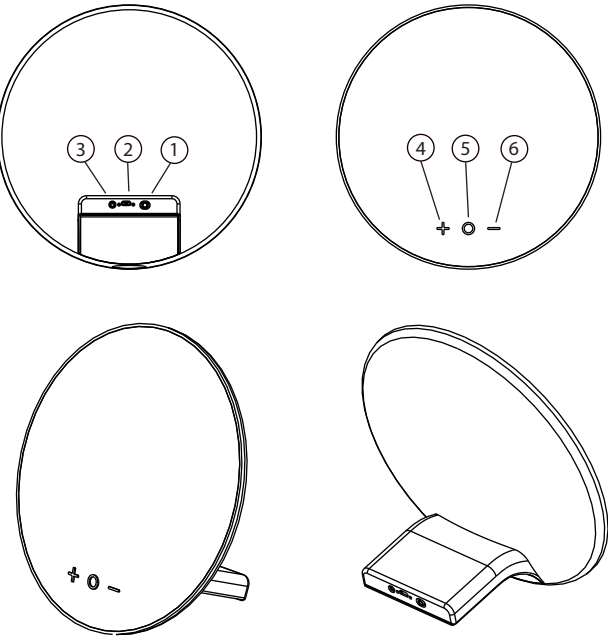

- 1. Power on / off
- 2. Charging
- 3. AUX-input
- 4. Next / volume up
- 5. Play / Pause
- 6. Previous / Volume Down

Power:
Fully charge the speaker before first use.

To charge the battery, use the micro USB cable (included): Insert the Micro USB into ② located on the back of the device, then plug the USB-A into a USB port on a computer or wall charger (not included).

A red light indicates charging. When the battery is full, the red light turns off automatically.

Play music via Bluetooth:
Turn the speaker on by sliding ① on the back of the speaker to the 'ON' position.

The blue indicator light flashes quickly. This indicates that the speaker is in pairing mode and is searching for your Bluetooth device.

Turn on the Bluetooth feature on your device, search the list of available devices for the speaker called “**Design Speaker**”. (If necessary, enter the password "0000" to finish pairing).

The blue light starts to blink slowly when the pairing is completed. Start playing music on your device.
The speaker has a range up to 10 m.

Adjust the volume of your device to a comfortable level.
Turn the speaker off, when not in use.

Play music via AUX:
Use the included AUX cable to play music for other devices without Bluetooth.
Connect the supplied AUX cable to ③ on the back of the speaker, and plug the other end into your device's 3.5mm jack input.
The speaker automatically switches to AUX playback mode.
All features are operated via your device.

Button control: (when the speaker is wirelessly connected to a device)
+: Press for next number. Press and hold to increase the volume.
-: Press for previous number. Press and hold to decrease the volume.
o: Press once to play / pause your music playback.

Warning:
Keep away from water and heat.
Low power levels can cause poor connection.
The battery pack must not be exposed to excessive heat such as sunshine, fire or the like.

The box contains:
1 x Speaker
1 x 50 cm charger cable
1 x 30 cm AUX cable

Bluetooth Version	V 5.0
Charging Voltage	5 V
Charging Current	500 mA
Battery Working Voltage	3.7 V
Charging Time	Up to 3 hours
Connection type	Micro USB-port
Playback Time	Up to 4 hours
Battery Capacity	1200 mAh
Watts per channel	2 x 5 W
Frequency Response	120 Hz~18 kHz
Product size (LxWxH mm)	260x260x120 mm
Weight of speaker	890 g

In case of problems or questions about the product, please contact the importer at: info@nohro.dk or +45 6913 2121.

**All registrated trademarks belongs to their respectful owners and has nothing to do with this product.*