


Brugermanual



Boksen indeholder:

- 1x kamera
- 1x strop
- 1x Mikro SD kort (omformer til SD-kort medfølger ikke)
- 1x manual
- 30 cm oplader kabel

Funktioner:

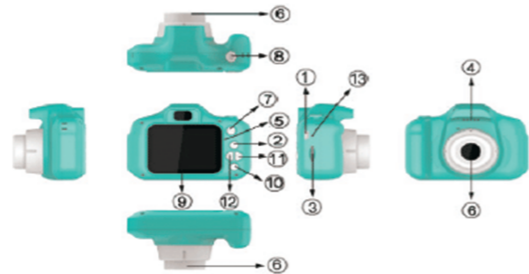

- 1. USB
- 2. Op
- 3. SD-kort indgang
- 4. Højtaler
- 5. Indikationslys
- 6. Objektiv
- 7. Tænd/sluk
- 8. Optagelse/kamera
- 9. Display
- 10. Ned
- 11. Tilstand
- 12. Menu
- 13. Gendan

Funktionsbeskrivelse

1. USB

USB-indgang til opladning af batteriet i kameraet.

2. Op

Navigationsknap. I kameratilstand kan der skiftes imellem forskellige effekter til dine billeder.

3. SD-kort indgang

Til Mikro SD-kort. 256 MB Mikro SD-kort medfølger.

4. Højtaler

Til afspilning af lyd fra video.

5. Mikrofon

Til optagelse af lyd i forbindelse med videooptagelse.

6. Objektiv

Kameraets linse.

7. Tænd / sluk

Hold knappen nede i min. 3 sek. for at tænde kameraet. Hold nede min. 3 sek. for at slukke kameraet.

8. Optagelse/kamera

Til videooptagelse og til at tage billeder.

9. Display

2.0 tommer farvedisplay (720x320 px).

10. Ned

Navigationsknap. I kameratilstand kan der skiftes imellem forskellige effekter til dine billeder.

11. Tilstand

Følgende tilstande kan skiftes i standbytilstand: Kameratilstand, videotilstand og fremvisningstilstand.

12. Menu

Tilgå menuen for indstillinger af kameraet.

13. Gendan

Gendan alle standardindstillinger.

Grundlæggende betjeningsvejledning til kamera / foto

1. Tænd og sluk

Tryk på tænd/sluk-knappen i 3 sek. for at tænde. Den blå indikator lyser, når den er tændt. Tryk på tænd/sluk-knappen igen, og den blå indikator er slukket.

2. Fototilstand

Tryk kort på "tilstandsknappen": skift til fototilstand, og kameraopløsningen samt kameraikonet vises i øverste højre hjørne af skærmen. Op til 3MP billeder. Jo højere opløsning man vælger, desto mere fylder billederne på Mikro SD kortet.

3. Kameratilstand

Tryk kort på "tilstandsknappen" for at skifte til kameratilstand, og kameraopløsningen samt kameraikonet vises i øverste højre hjørne af skærmen. Tryk kort på optagelse/kamera-knap for at starte optagelse. Optagelsesindikatoren vil blinke.

Tryk kort på optagelse/kamera-knap for at tage et billede. Når billedet tages, blinker indikatoren én gang og angiver, at billedet er gemt på Mikro SD-kortet.

4. Afspilning af video / foto

Tryk kort på "Tilstands-knappen" for at skifte til afspilningstilstand, og afspilningsikonet vises i øverste højre hjørne på skærmen. Brug navigationsknapperne til at skifte imellem filerne på Mikro SD-kortet.

5. Menuindstillinger

Tryk kort på "Menu" for at åbne indstillingerne. Naviger i menuen med navigationsknapperne. Vælg den indstilling der skal ændres og bekræft ændringen ved kort at trykke på optagelse/kamera-knap.

Tryk kort på "Menu"-knappen for at forlade menuen.

USB-tilstand

Tilslut USB-kablet mellem kamera og din computer, og kameraet tilgår automatisk USB-tilstand. Du kan nu overføre videoer og billeder fra kameraet til din computer.

Batteriinstruktioner

1. Batteriindikator.



2. Tilslut det medfølgende opladerkabel til en USB-oplader. Enten en vægoplader eller en computer. Kameraet tændes automatisk, når det tilsluttes strøm.

For hurtigst mulig opladning, bør man ikke benytte kameraet under opladning. Når kameraet oplades, lyser kameraet orange. Når kameraet er fuldt opladt, slukkes lyset.

Display	Farvedisplay
Objektiv	Fast objektiv, 100 graders vinkel
Opbevaringsmedie	Micro SD-kort. MAX 32 GB. 256 MB Mikro SD-kort inkluderet
Fotoformat	JPG
Sprog	Engelsk, russisk, kinesisk (forenklet) Kinesisk / traditionel koreansk, japansk osv.
Kameraformat	JPEG
Videooptagelse	1080P: 1440x1080 -720P: 1280x720 VGA: 640x480
TFT-skærm	2,0 tommer skærm (720x320)
Tidsudløser	Fra / til
Bevægelsesdetektion	Fra / til
Loopoptagelse	Slukket, 1 minut, 3 minutter, 5 minutter, 10 minutter
Fotooptagelse	3M, 2M, 1.3M, VGA
Slet	Slet enkelt, slet alt
Formater	Annuler, udfør
Ladepænding	DC 5 V - 1 A
Operativ system	Windows me / 2000/2003 / XP / vista / Win7, Mac, Linux
Optisk frekvens	50 HZ, 60 HZ
Nulstil system	Annuler, udfør
Spil	Snake
Vandtæt	Tåler vandsprøjt

I tilfælde af problemer eller spørgsmål til produktet, kontakt da venligst importøren på: info@nohr.dk eller +45 6913 2121.


Product manual



The box contains:

- 1x camera
- 1x strap
- 1x Micro SD card (converter to SD card not included)
- 1x manual
- 30 cm charging cable

Functions:

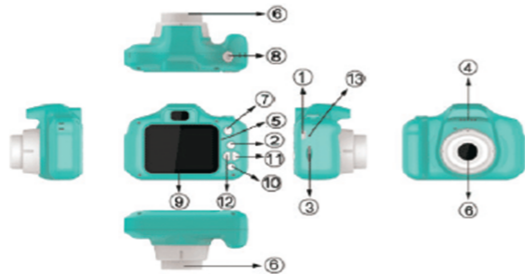

- 1. USB
- 2. Up
- 3. SD card slot
- 4. Speaker
- 5. Indicator light
- 6. Lens
- 7. Power on/off
- 8. Record/camera
- 9. Display
- 10. Down
- 11. Mode
- 12. Menu
- 13. Restore

Button functions description

1. USB

USB input to charge the battery in the camera.

2. Up

Navigation button. In photo mode, you can switch between different effects for your images.

3. SD card input

For Micro SD card. 256 MB Micro SD card included.

4. Speaker

For playing the audio from recorded videos.

5. Microphone

For recording audio when recording videos.

6. Lens

Camera lens.

7. Power

Hold the button down for 3 sec. to turn on the camera. Hold the button down for 3 sec. to turn off the camera.

8. Capture/camera

For recording video and to take photos.

9. Display

2.0 inch color display (720x320 px).

10. Down

Navigation button. In camera mode, you can switch between different effects for your images.

11. Mode

The following modes can be switched between modes: Camera mode, video mode and display mode.

12. Menu

Access the camera settings menu.

13. Restore

Restore all default settings.

Basic camera / photo operating instructions

1. Turn on and off

Press the power button for 3 sec. to turn on the camera. The blue indicator will light up, when it is on. Press the power button again and the blue indicator turns off.

2. Photo mode

Press the "Mode button" to switch to photo mode and the camera resolution and camera icon will appear in the upper right corner of the screen. Up to 3MP images. The higher the resolution you choose, the more space the images take up on the Micro SD card.

3. Camera mode

Press the "Mode button" to switch to camera mode, display the camera resolution and the camera icon in the upper right corner of the screen. Briefly press the capture/camera button to start recording, and the recording indicator flashes.

Briefly press the capture/camera button to take a photo. When the picture is taken, the indicator flashes once and indicates that the picture is saved to the Micro SD card.

4. Video/Photo playback

Press the "Mode button" to switch to playback mode and the playback icon appears in the upper right corner of the screen. Use the navigation buttons to switch between the files on the Micro SD card.

5. Menu settings

Press the "Menu button" to open the camera settings. Navigate the menu with the navigation buttons. Select the setting to change, and confirm the change, by pressing the capture/camera button.

Press the "Menu" button to exit the menu.

USB mode

Connect the USB cable between the camera and your computer and the camera will automatically access USB mode. You can now transfer videos and pictures from the camera to your computer.

Battery instructions

1. Battery indicator.



2. Connect the supplied charging cable to a USB charger. Either a wall charger or a computer. The camera automatically turns on, when it is connected to power. For faster charging, do not use the camera during charging. When the camera is charging, an orange indicator lights up. When the camera is fully charged, the light goes out.

Display	Color display
Lens	Fixed lens, 100 degree angle
Storage media	Micro SD card. MAX 32GB. 256 MB Micro SD-card included
Photo format	JPG
Language	English, Russian, Chinese (Simplified) Chinese /Traditional Korean, Japanese, etc.
Camera format	JPEG
Camera resolution	1080P: 1440x1080 -720P: 1280x720 VGA: 640x480
TFT display	2.0 inch screen (720x320)
Time mark	Off/on
Motion detection	Off/on
Loop recording	Off, 1 minute, 3 minutes, 5 minutes, 10 minutes
Photo recording	3M, 2M, 1.3M, VGA
Delete	Delete single, delete all
Format	Cancel, execute
Charging voltage	DC 5 V - 1 A
Support system	Windows me/2000/2003/XP/vista/Win7, Mac, Linux
Optical frequency	50HZ, 60HZ
Reset system	Cancel, execute
Game	Snake
Splash proof	Resistant to splashing

In case of problems or questions about the product, please contact the importer at: info@nohr.dk or +45 6913 2121.